



Restoring Plastic Headlights



Scratch A way®



REQUIRED

- Machine: Scratch Away SAW360 polisher
- Sandpaper #991030 (A)
- Sandpaper #991040 (B)
- Sandpaper #991050 (C)
- Scratch Away discholder #991010
- Finishing Polish #841202
- Polishingfelt #991020
- Water and soap mix in spray bottle
- Polishing cloth, sponge and cleaning paper

PROCESS

Make sure the surface is clean!

Mix water with a little washing-up liquid in a spray bottle. This mixture removes abrasive particles that are released from the surface during sanding.

Move the machine controlled with constant, even pressure across the surface with approximately the same, repetitive movement.

Always work in steps from coarse (A) to medium (B) to fine (C)

For best results: never skip one or more steps between the first sanding disc (A) and polishing.



TIPS



Never sand more than necessary; the deeper the sanding, the greater the chance of distortion.

Work over the entire surface during the various steps.

Clean and dry the surface before polishing. Apply sufficient polish to the surface.

Use a new disk for the felt disc in time; a used disc (with polish) attracts dirt and a dirty disc causes new scratches.

Scratch Away